



MATERIALS

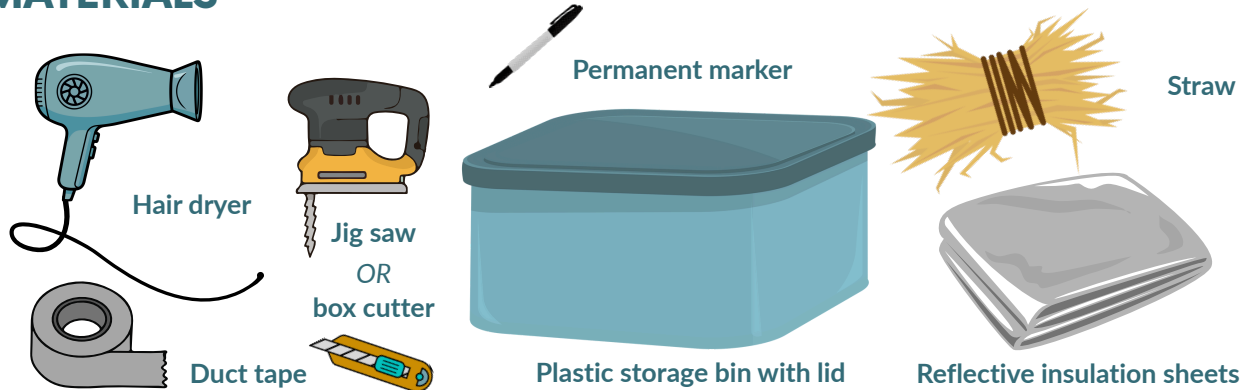


1 Mark and prepare the bin

- Trace a circle approximately six inches in diameter with marker on either side of plastic storage bin.

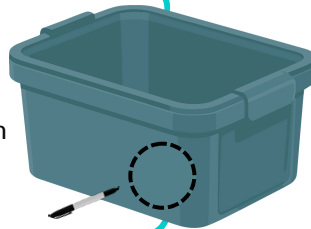


2 Cut the entry/exit holes

- Use hair dryer to warm area for 1-2 minutes.
- Once plastic is warm and pliable, use jig saw or box cutter to cut holes where marked.
- Line edges with strips of duct tape to anchor the insulation and make the edges safe.

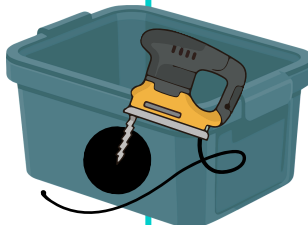

3 Insulate and line the interior

- Line bottom of bin with a thin layer of straw, then line inside walls with sheets of reflective insulation sheets.
- Add holes to insulation sheets that line up with holes in storage bins.

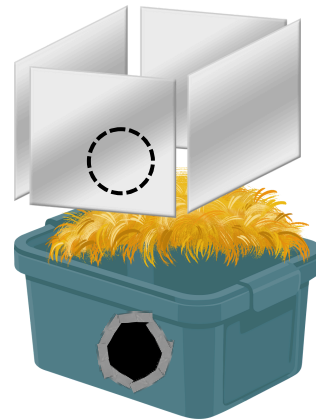

4 Position the shelter

- Place lidded bins in a safe, sheltered space with both exits clear. Community cats thank you for their new home!

